

The Little Ann Assembly Instruction

By Laser Dollhouse Designs



Parts for assembly



Door Assembly



Roof Assembly



Subfloor
Assembly
S1 thru S4



2nd Floor
Assembly
2A, 2B & Fretwork



1st and 2nd Floors



Stairs




1st Floor
Walls
1A , 1E, & 1F



Plexiglas



Window
Frames

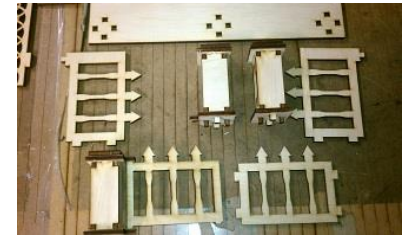

Fence
Assembly



Porch rails
1A, 1B & 1C



Base Floor

Step 1. locate the Base floor and position as seen in Figure 1



Figure 1

Step 2. Locate Subfloor Assembly S1 thru S4 and insert S1 thru S4 tabs into Base floor matching Slots S1-S4 as seen in Figure 2



Figure 2

Step 3. Take the First floor marked 1A thru 1F and insert on top of assembled subfloor by aligning open slots to tabs. Refer to figure 3.

Step 4. Take 1A Wall and insert into slot 1A on first floor. Then insert door assembly thru cutout for the door opening. Refer to figure 4 and 5.



Figure 3



Figure 4



Figure 5

Figure 2

Step 5. Take the two rectangle and one half circle Plexiglas cutouts and insert into openings from the interior side of wall. Finally secure by placing the interior door frame in place. Refer to figure 6, 7 and 8.



Figure 6



Figure 7



Figure 8

Step 6. Take the porch rail 1A, 1B and 1C and insert into slots 1A-1C. Also place walls 1E and 1F into respective slots on first floor. Refer to figure 9.



Figure 9

Step 7. Place window frame on exterior of walls 1E and 1F
Refer to figure 10.



Figure 10

Step 8. Place window Plexiglas cutouts into cutouts of walls 1E and 1F from the interior side and then place interior frames to secure. See figures 11 and 12.



Figure11



Figure12

Step 9. Secure first floor by inserting second floor on top and aligning cutout tabs to slots on top of first floor rails and walls. See figures 13



Figure13

Step 10. Place second floor walls 2A and 2b into slots provided. Refer to figure 14



Figure14

Step 11. Place window frame and Plexiglas into 2A as done with walls 1E and 1F. See figure 15



Figure15

Step 12. Align and place one side of the roof making sure the cut slots closest to the top are up as in figure 16



Figure16

Note: Two front cutout,
The most forward cutouts closest to the top is right side up facing.

Step 13. Place fretwork into roof by matching tabs and slots. See figure 17



Figure17

Step 14. Now add the other side of the roof by matching the tabs and slots. Refer to figure 18



Figure18

Step 15. Locate the post as seen in figure 19. This post fits to the front right forward corner. Place fence rail as seen in figure 20 into the side of post and into base. Once in place should be as in figure 21



Figure19



Figure20



Figure21

Step 16. Locate the fence rail as seen in figure 22 and add to opening in post. Next locate post as seen in figure 23 and insert fence and post to base. The circle to hold functioning gate should be at bottom.



Figure22



Figure23

Step 17. Locate final fence rail with swing gate along with remaining side fence and insert into base as seen in figure 24



Figure24

Step 18. Take stairs assembly and place within fence as seen in figure 25



Figure25

Step 19. Install shingles to house. Shingles align first set to bottom of roof panel. Next shingle aligns to the top line of lower shingles as seen in figure 26.



Figure26



Laser Dollhouse Designs
www.laserdollhouses.com
Email: laserdollhouses@aol.com