



The Abriana Assembly Instruction By Laser Dollhouse Designs



Parts for assembly

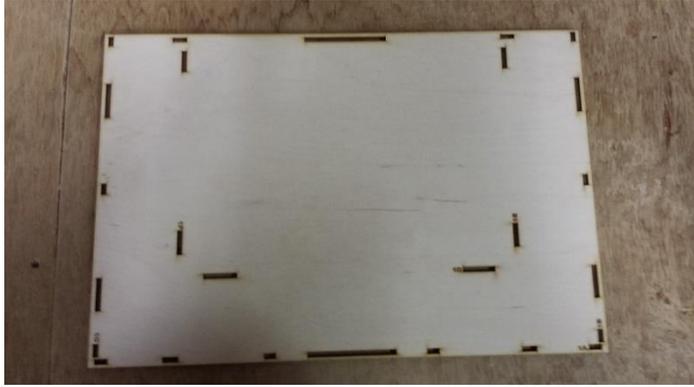

1st floor base

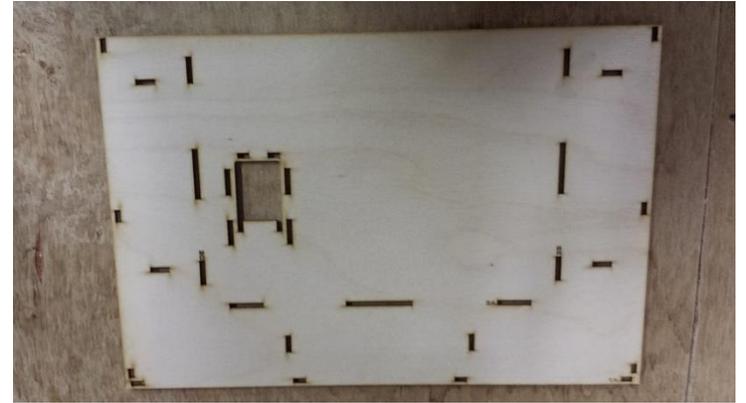

2nd floor base



3rd floor base




stairs



chimney




Porch roof assembly

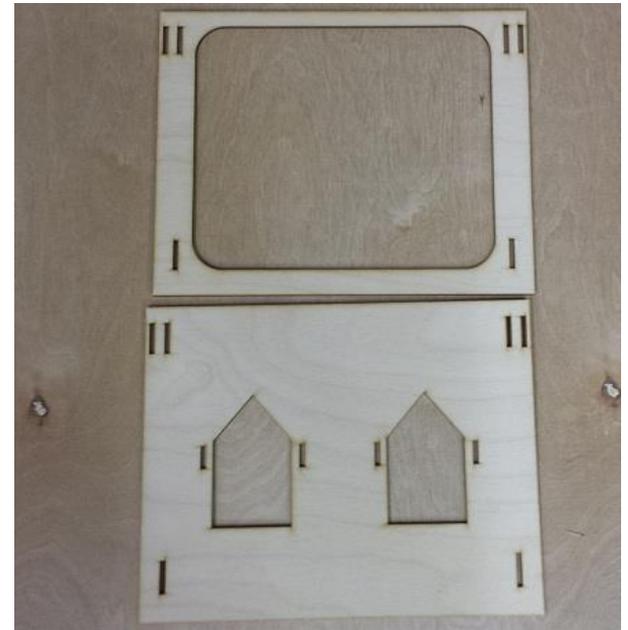


Front and rear roof

Parts for assembly

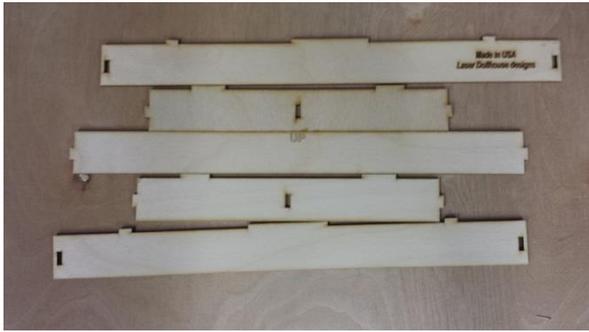

Base support rails

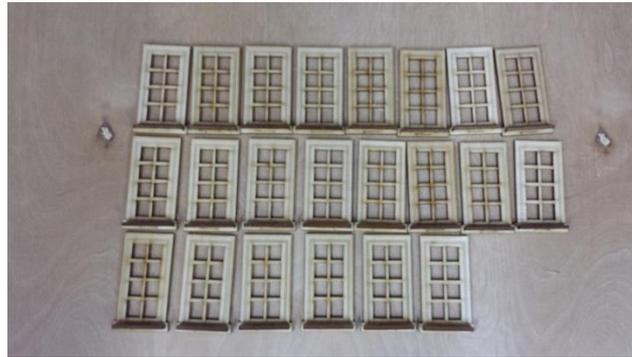

Window frames (22)



Window frames dormer
(2) Interior (2) exterior




Plexiglas



Safety rails



Gable Decorations

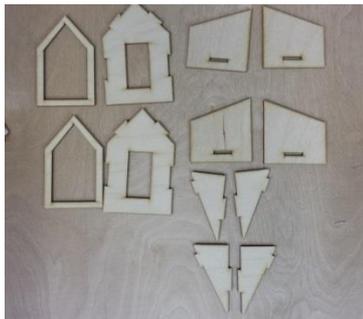

Dormer assembly




Main entry door assembly




Porch stairs


Parts for assembly

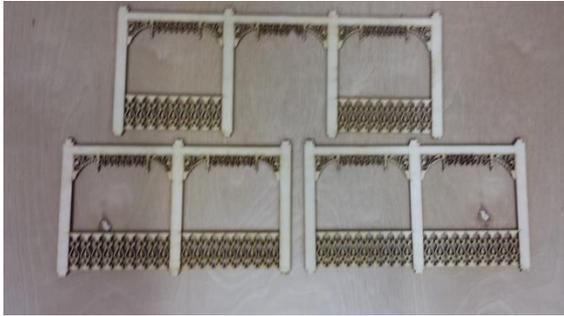


Porch rails

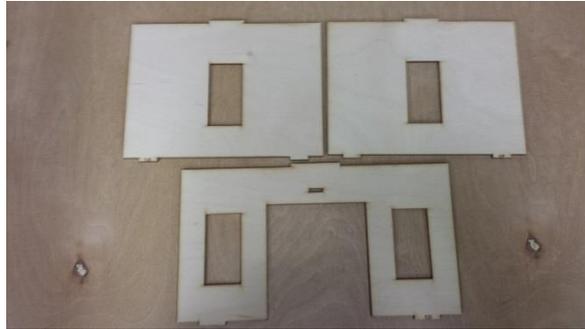

1st floor walls

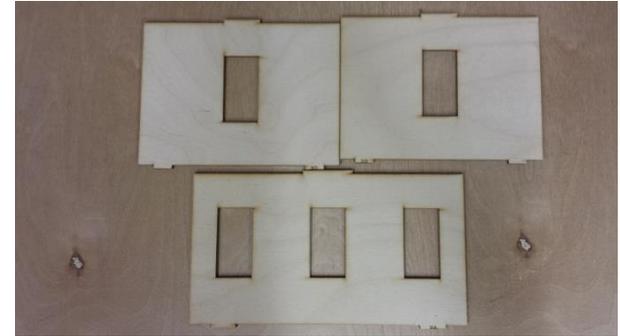

2nd floor walls

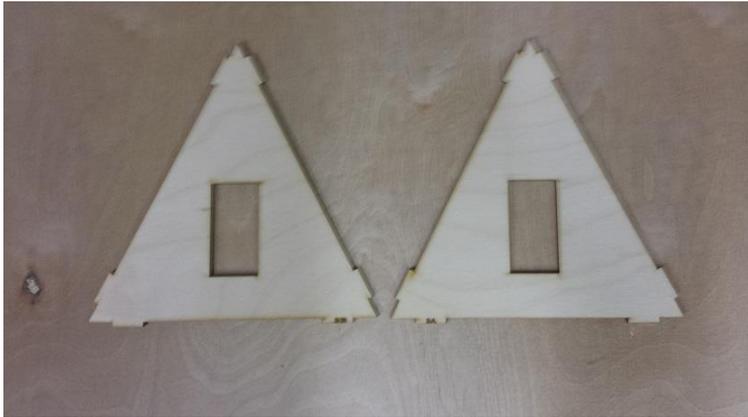

3rd floor walls

NOTE: Please do a dry assembly using only tape to hold house together. This will get you familiar with parts, location, and fit. This will also give you a chance to visualize how you want to approach the build.

Materials for build;

1. Wood glue, you may use Titebond, elmers or any good wood glue for build.
2. Masking tape to hold house in place during assembly and gluing.
3. Utility knife, for trimming if needed tabs.



Step 1. locate the Base floor position upside down and install support rails as seen in Figure 1

Step 2. Turn base right side up.

Step 3. Align windows from the interior side making sure that there is even spacing matching each side. Use super glue to secure by adding from front to edges. (Do this only if you have completed house and are gluing together. DO NOT glue if doing dry fit) See figure 2.



Figure 1



Figure 2

Step 4. remove plastic protection from plexiglas and install into opening in wall. See figure 3.

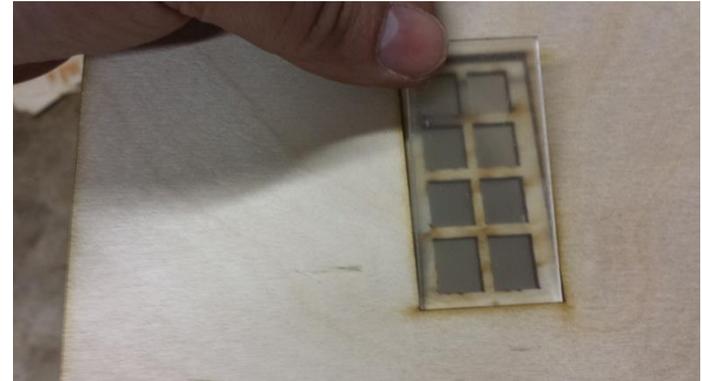


Figure 3

Step 5. Install outer window frame by aligning to the interior frame. See figure 4.

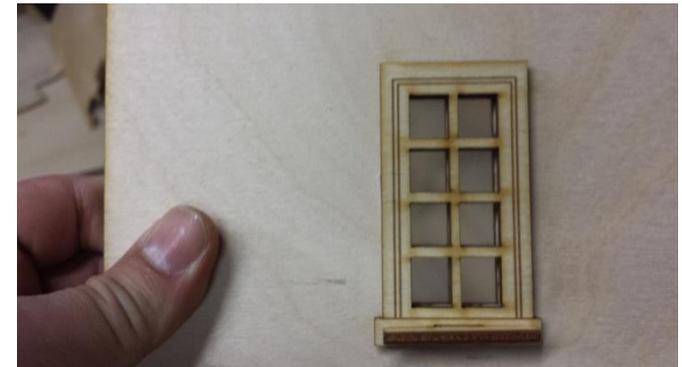


Figure 4

Step 6. Install first floor walls into base. Wall and base are marked on tabs and slots. See figure 5.

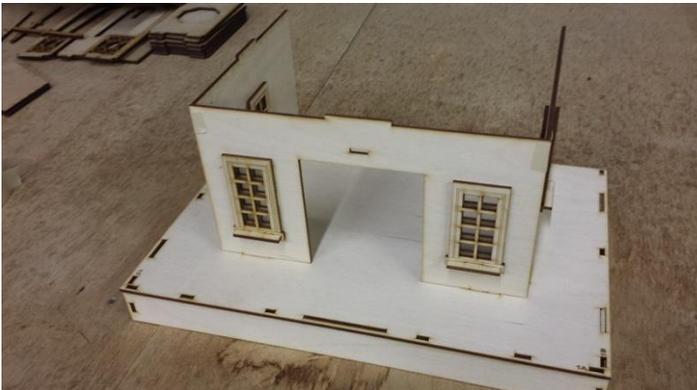


Figure 5

Step 7. Install main entry door into cutout in front wall. See figure 6.



Figure 6

Step 8. Install door topper. See figure 7.



Figure 7

Step 9. Install main entry door interior door frame.
See figure 8.



Figure 8

Step 10. Install porch rails. See figure 9.



Figure 9

Step 11. Install stairs into 2nd floor base. Note: Stair must be installed before adding 2nd floor base to first floor walls. See figure 10.

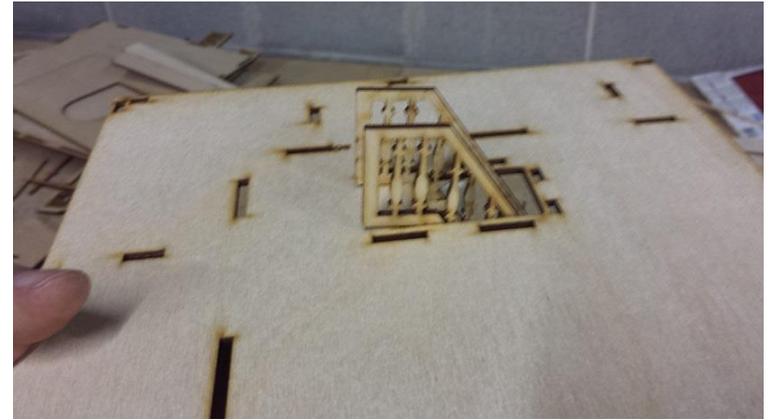


Figure 10

Step 12. Install 2nd floor to first floor walls by matching slot openings to tabs. See figure 11.



Figure 11

Step 13. Install stairs safety rails. See figure 12.

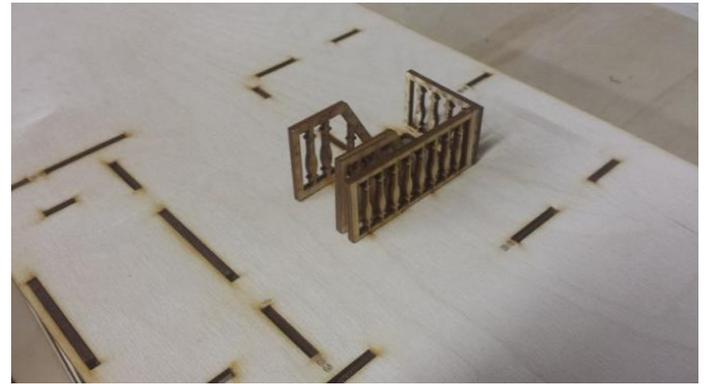


Figure 12

Step 14. Install 2nd floor walls. See figure 13.

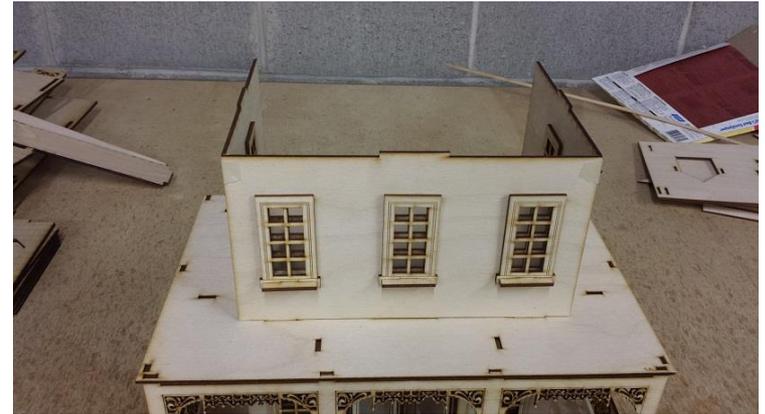


Figure 13

Step 15. Install 3rd floor base onto 2nd floor walls.
See figure 14.



Figure 14

Step 16. Install 3rd floor walls. See figure 15.



Figure 15

Step 17. Install rear roof panel. See figure 16.



Figure 16

Step 18. Install front roof panel and gable's. See figure 17.



Figure 17

Step 19. Install dormer side panel supports.
See figure 18.



Figure 18

Step 20. Install front dormer walls. See figure 19.



Figure 19

Step 21. Install dormer roof panels. See figure 20.



Figure 20

Step 22. Install interior dormer frames. See figure 21.



Figure 21

Step 23. Install chimney. See figure 22.



Figure 22

Step 24. Install porch roof support rails.
See figure 23.



Figure 23

Step 25. Install porch roof panels.
See figure 24.



Figure 24

Step 26. Install porch stairs. See figure 25.



Figure 25

The Abriana is now completed.



Laser Dollhouse Designs

www.laserdollhouses.com

Email: laserdollhouses@aol.com