

The Country Outhouse assembly Instruction

By Laser Dollhouse Designs



Parts for assembly

- 1- Left wall
- 1- Right wall
- 1- roof
- 1- door
- 1- base
- 1- front wall with moon sign
- 1- rear wall
- 11- running wood frames
- 1- right toilet seat frame
- 1- left toilet seat frame
- 1- Front toilet seat frame
- 1- upper toilet frame
- 1- toilet back
- 1- toilet seat



Step 1. locate the Base floor and front toilet seat wall and install as seen in Figure 1

Step 2. Install left and right toilet walls to base as seen in Figure 2

Step 3. Install top toilet walls to base as seen in Figure 3



Figure 1

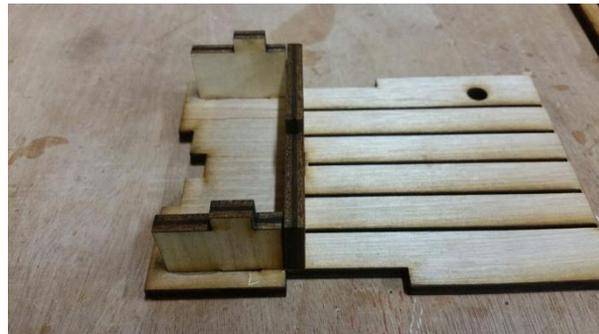


Figure 2



Figure 3

Step 4. Install rear wall as seen in Figure 4

Step 5. Install rear seat back as seen in Figure 5

Step 6. Install top toilet seat as seen in Figure 6

Step 7. Install side walls as seen in Figure 7

Step 8. Install roof as seen in Figure 8



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8

Step 9. Install door into hole in base, DO NOT GLUE, fig. 9

Step 10. Install front wall frame and door latch by inserting door into open slot, Figure 10 once in check door operation.

Step 11. Install wood cross frames onto side walls, frames should line up even from front to rear, Figure 11

Step 12. Install rear cross frames, frames should go across and be even with side frames previously installed, Figure 12



Figure 9



Figure 10



Figure 11



Figure 12

Step 13. Install roof cross frames, fig. 13

Step 10. Install front door frame, Figure 14.



Figure 13



Figure 14



The Outhouse is now complete.
Time for some TP!!!

Laser Dollhouse Designs

www.laserdollhouses.com

Email: laserdollhouses@aol.com